



INSTALLING A FLOATING NETWORK LICENSE

If you are updating a floating network license, you will be issued a license file, which is used to update only the Network Server.

When you receive a new license file for a floating network installation, follow the below steps to activate the new license file:

WE HAVE INCLUDED THIS LINK TO THE ACTIVATION INSTRUCTIONS

[Download CAMWorks License Activation Guide.pdf](#)

3.1 MB

It is suggested you read the Activation document before proceeding. Just complete the quick login information and the download will be available.

For software downloads you will need to go to www.CAMWORKS.com and use your existing CAMWorks account or if you have no account, you will need to register for a new account. You must register to create your own company account. You will want to save this information as this account will be used by you for future downloads of the software. It could take up to 48 hours to activate the new account so we included a temporary log-in.

This is a temporary log-in for the web site in case you do not have a login.

Please do not change the name or password on this account.

User Name: cweval

Password: camworks

For existing customers, please make sure you have the latest version of the CAMWorks license manager installed before requesting the license file.

REQUEST A NEW FLEX/LM LICENSE

PHYSICAL ACCESS:

The license request file required for generating the license ***must be created directly on the computer where the license will reside***. If the license request file is created when running the License Manager via remote communications software and submitted to gt.register@hcl.com, an invalid license will be generated. Hence, ensure that physical access is available to the computer on which the license will reside and will be consequently used at least during the stage of generating the License Request File.



INSTALLING A FLOATING NETWORK LICENSE

REMOTE INSTALLATION:

Once the License file is emailed back to you, the activation of the license can be performed remotely if physical access is not possible.

- From the Windows desktop, select **Start** on the taskbar, then select **All Programs**, then CAMWorks License Manager and then right click on the CWFlexLM License Manager icon and select **Run as Administrator**.
- For the License method, select **FlexLM Software**.
- Click the Request License button..
- Complete the form. An asterisk indicates a required field.
- Email the request.

If your computer has Outlook email capabilities, click the Outlook button and send the email with a subject line that includes your Copy Protection Device Serial Number (CPD) and with the attachment to gt.register@hcl.com. If this computer does not have email capabilities, click the Other button. Note the location of the file containing your information, then email the file in an attachment to gt.register@hcl.com from another computer. Make sure to include your Copy Protection Device Serial Number (CPD) in the subject line of the email. Click Close to exit the request form. You can also close the License Manager. CAMWorks will not run until you receive the license file from and activate the license.

UPDATING THE NEW LICENSE ONCE YOU RECEIVE THE LICENSE FILE FROM GT.REGISTER@HCL.COM

- Log off all clients.
- On the **Server computer**, open the CAMWorks License Manager utility by right clicking on the icon and selecting "Run as Administrator". The CAMWorks License Manager Dialog box is displayed.
- Click the **Server Settings** tab.
- Click **Stop** to stop the **CAMWorks License Service**.
- Click **Remove** to remove the License Service and the current license.
- **Close** the CAMWorks License Manager and reopen it by right clicking on the icon and selecting "Run as Administrator".
- Once again, click on the **Server Settings** tab. Click on the Browse button next to the **License file path** field. Browse to the folder containing the new license file.
- **Select** the new license file and click **Open**.
- In the **Log file path** field, set the path for the log file.
- Click the **Install CAMWorks License Server** button.
- Click **Start** to start the License Server and thereby enable the new license.
- Click **OK** to close the CAMWorks License Manager dialog box.

Note: No changes are required on the client computers.