



# INSTALLING A HARDWARE DONGLE LICENSE

Note: *Please make sure you have the latest version of the CAMWorks license manager.*

If you have not installed this update, please download from the [www.camworks.com](http://www.camworks.com) website. The Dongle tools are now integrated into the License Manager.

## WE HAVE INCLUDED THIS LINK TO THE ACTIVATION INSTRUCTIONS

[Download CAMWorks License Activation Guide.pdf](#)

3.1 MB

It is suggested you read the Activation document before proceeding. Just complete the quick login information and the download will be available.

For software downloads you will need to go to [www.camworks.com](http://www.camworks.com) and use your existing CAMWorks account or if you have no account, you will need to register for a new account. You must register to create your own company account. You will want to save this information as this account will be used by you for future downloads of the software. It could take up to 48 hours to activate the new account so we included a temporary log-in.

*Please do not change the name or password on this account.*

User Name: cweval

Password: camworks

## ACTIVATING THE LICENSE

- The .COD file must be on the same PC as CAMWorks.  
We recommend you put the .COD file in the same folder as the License Manager.
- Right click on the License Manager Icon and select "Run as Administrator" then click the License Setup tab.
- In the License Method dropdown, make sure Hardware Dongle is selected.
- In the Hardware Dongle Section, Click the Update Dongle button to the right.
- Browse to the folder where you copied the .COD file, select the file, click Open, then click Apply.
- Click the Status tab and verify that the information has been updated as follows:
  - Authorization = Succeeded
  - License Type = Hardware Dongle
  - Dongle ID = 30299
- Click Close to exit the License Manager.

