



INSTALLING A STANDALONE FLEXLM LICENSE

If you are installing a Standalone FlexLM license, you will be issued a license file, which is used on the computer where the software is installed.

When you receive a new license file for the installation, follow the below steps to request and once received, activate the new license file:

WE HAVE INCLUDED THIS LINK TO THE ACTIVATION INSTRUCTIONS

[Download CAMWorks License Activation Guide.pdf](#)

3.1 MB

It is suggested you read the Activation document before proceeding. Just complete the quick login information and the download will be available.

For software downloads you will need to go to www.CAMWORKS.com and use your existing CAMWorks account or if you have no account, you will need to register for a new account. You must register to create your own company account. You will want to save this information as this account will be used by you for future downloads of the software. It could take up to 48 hours to activate the new account so we included a temporary log-in.

This is a temporary log-in for the web site in case you do not have a login.

Please do not change the name or password on this account.

User Name: cweval

Password: camworks

For existing customers, please make sure you have the latest version of the CAMWorks license manager installed before requesting the license file.

REQUEST A NEW FLEX/LM LICENSE

- From the Windows desktop, select **Start** on the taskbar, then select **All Programs**, then CAMWorks License Manager and then right click on the CWFlexLM License Manager icon and select **Run as Administrator**.
- For the License method, select *FlexLM* Software.
- Click the Request License button..
- Complete the form. An asterisk indicates a required field.
- Email the request.

If your computer has Outlook email capabilities, click the Outlook button and send the email with a **subject line that includes your Copy Protection Device Serial Number (CPD)** and with the attachment to gt.register@hcl.com. If this computer does not have email capabilities, click the Other button. Note the location of the file containing your



INSTALLING A STANDALONE FLEXLM LICENSE

information, then email the file in an attachment to gt.register@hcl.com from another computer. **Make sure to include your Copy Protection Device Serial Number (CPD) in the subject line of the email.** Click Close to exit the request form. You can also close the License Manager. CAMWorks will not run until you receive the license file from and activate the license.

ACTIVATE THE LICENSE

- When you receive the license file from Geometric (gt.register@hcl.com), copy the file to a folder on your PC. The license file must be on the same PC as CAMWorks. **We recommend you put the license file in the same folder as the License Manager.**
- Right click on the License Manager Icon and select **"Run As Administrator"** then click the **License Setup** tab.
- In the Configure FlexLM license section, make sure **Select node locked (Standalone) license file** is selected. Click the Browse button to the right.
- Browse to the folder where you copied the license file, select the file, click Open, then click **Apply**.
- Click the Status tab and verify that the information has been updated as follows:
 - Authorization status = Succeeded
 - License File Used = "path and filename"
 - License Type = Nodelocked
- Click the **Authorized Modules** tab. This tab lists the modules you are licensed to run and the version. The Expiration field indicates if the license has an expiration date or is permanent.
- Click **Close** to exit the License Manager.
- Start CAMWorks. Your updated CAMWorks is now enabled.